

**COMMANDER® PRO
VARIABLE FREQUENCY DRIVE
QUICK REFERENCE GUIDE**

START HERE -

Before you begin, you will want to become familiar with the purpose of the various keys on the key pad. Do not press any of the keys at this time, but first understand what function each key provides.

Key	Function
EDIT	Allows for changes to be made.
UP / DOWN	Scroll up or down to view change selections.
ENTER	Saves changes.
ESCAPE	Discard changes and/or return to the home screen.



Be sure your drive is installed and wired properly per the instruction manual before proceeding.

ENTERING THE PROGRAM MODE

Press and hold the **EDIT** and **ENTER** keys simultaneously for 3-5 seconds to access programming mode.



ENTERING THE FAULT LOG

Press and hold the **UP** and **DOWN** keys simultaneously for 3-5 seconds to access the fault log.



MAXIMUM MOTOR CURRENT CHARTS

MAXIMUM MOTOR CURRENT 3-PHASE (AMP)				
MANUFACTURER	1.5 HP	2.0 HP	3.0 HP	5.0 HP
Franklin	5.9	8.1	10.9	17.8
Grundfos	7.3	8.7	11.6	17.4
Pentek	6.6	8.0	10.1	17.5
CentriPro	6.6	8.0	10.1	17.5

MAXIMUM MOTOR CURRENT 3-WIRE, SINGLE PHASE (AMP)					
MANUFACTURER	0.5 HP	.75 HP	1.0 HP	1.5 HP	2.0 HP
Franklin	6.0	8.0	9.8	11.5	13.2
Grundfos	6.0	8.4	9.8	11.6	13.2
Pentek	6.3	7.9	9.5	11.0	12.2
CentriPro	6.3	7.9	9.5	11.0	12.2
Flint & Walling	6.0	8.0	10.4	11.5	13.2



**COMMANDER® PRO
FLUJO DE FRECUENCIA VARIABLE
GUÍA DE REFERENCIA RÁPIDA**

COMIENCE AQUÍ -

Antes de comenzar, querrá familiarizarse con el propósito de las distintas teclas del teclado. No presione ninguna de las teclas en este momento, sino primero conozca qué función cumple cada tecla.

Tecla	Función
EDIT (EDITAR)	Permite que se realicen cambios.
UP / DOWN (ARRIBA / ABAJO)	Posibilita desplazarse hacia arriba o hacia abajo para ver las selecciones de cambio.
ENTER (ENTRAR)	Guarda los cambios.
ESCAPE (SALIR)	Descarta cambios y/o regresa a la pantalla de inicio.



Asegúrese de que su unidad esté instalada y cableada correctamente según el manual de instrucciones antes de continuar.

ENTRAR EN EL MODO DE PROGRAMA

Mantenga presionadas las teclas EDIT y ENTER simultáneamente durante 3-5 segundos para acceder al modo de programación.



INGRESAR AL REGISTRO DE FALLAS

Mantenga presionadas las teclas UP y DOWN simultáneamente durante 3-5 segundos para acceder al registro de fallas.



TABLAS DE CORRIENTE MÁXIMA DEL MOTOR

CORRIENTE MÁXIMA DEL MOTOR TRIFÁSICA (AMP)				
FABRICANTE	1.5 HP	2.0 HP	3.0 HP	5.0 HP
Franklin	5.9	8.1	10.9	17.8
Grundfos	7.3	8.7	11.6	17.4
Pentek	6.6	8.0	10.1	17.5
CentriPro	6.6	8.0	10.1	17.5

CORRIENTE MÁXIMA DEL MOTOR 3 CABLES, MONOFÁSICO (AMP)					
FABRICANTE	0.5 HP	.75 HP	1.0 HP	1.5 HP	2.0 HP
Franklin	6.0	8.0	9.8	11.5	13.2
Grundfos	6.0	8.4	9.8	11.6	13.2
Pentek	6.3	7.9	9.5	11.0	12.2
CentriPro	6.3	7.9	9.5	11.0	12.2
Flint & Walling	6.0	8.0	10.4	11.5	13.2

