


DEEP WELL JET PUMP REPAIR PARTS

(For Pricing Refer To Repair Parts Price List)

C62 & C62H SERIES


SECTION 9
PAGE 17
REPAIR PARTS
EFFECTIVE
NOVEMBER 1, 1984

3 STAGE

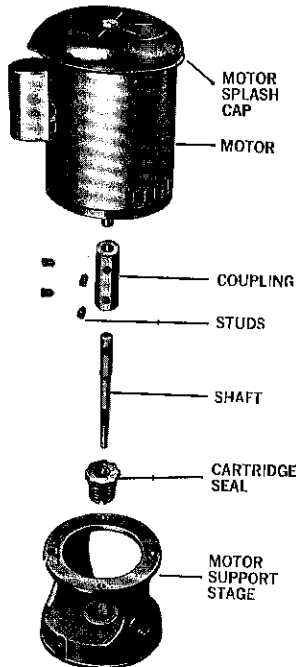

HORSEPOWER	1	1½	2
MODEL NUMBER	C6279	C62715 C62715H	C62720 C62720H
DESCRIPTION	PART NUMBER	PART NUMBER	PART NUMBER
Base Assembly	131236	131236	131236
Intermediate Stage Assembly	131239	131239	131239
Motor Support	131234	131234	131234
Motor Splash Cap	125706	125706	125706
Splash Cap Screw, 5/8" - 18	125707	125707	125707
Impeller, Brass (3)	131273	131277	131276
Impeller, Brass "H" Series (3)		131276	131279
†Impeller Nut	131285	131285	131285
Coupling	131735	131735	131735
Spring	130963	130963	130963
Spring Centering Washer	131736	131736	131736
Hub Clearance Ring	131282	131282	131282
Shaft	127326	127326	127326
Spacer, Brass	131281	131281	131281
Suction Clearance Ring	130957	130957	130957
Bearing-Base	130731	130731	130731
Gasket	130968	130968	130968
Cartridge Seal, Complete	131103	131103	131103
Hex Hd. Cap Screws, 3/8" x 6-1/4" (4)	*	*	*
Motor Lead Wire	125096	126605	126605
Control Valve, Complete	C981E	C981F	C981F
Control Valve, Complete "H" Series		C981G	C981G
1/4" Tube x 10-1/2"	*	*	*
90° Connector, 1/4" x 1/4"	*	*	*
Drain Plug, 1/4" NPT	*	*	*
Set Screw, socket head, cone point, 3/8" x 1/2" (2)	*	*	*
Set screw, socket head, cup point, 3/8" x 5/16" (2)	*	*	*
Hex Head Cap Screw, 3/8" x 3/4" (4)	*	*	*
Motor 1 Phase (Flatted Shaft)	92F110A	92F115A	92F120
†Motor 3 Phase (Flatted Shaft)	92F310A	92F315A	92F320A

4 STAGE

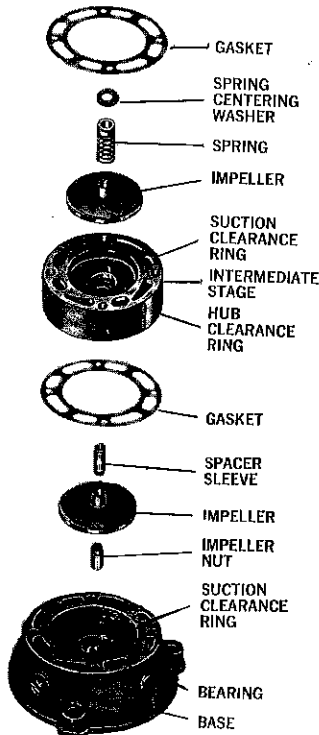

HORSEPOWER	1½	2
MODEL NUMBER	C62815	C62820
DESCRIPTION	PART NUMBER	PART NUMBER
Base Assembly	131236	131236
Intermediate Stage Assembly	131239	131239
Motor Support	131234	131234
Motor Splash Cap	125706	125706
Splash Cap Screw, 5/8" - 18	125707	125707
Impeller, Brass (4)	125177	131277
†Impeller Nut	131285	131285
Coupling	131735	131735
Spring	130963	130963
Spring Centering Washer	131736	131736
Hub Clearance Ring	131282	131282
Shaft	127327	127327
Spacer, Brass	131281	131281
Suction Clearance Ring	130957	130957
Bearing-Base	130731	130731
Gasket	130968	130968
Cartridge Seal, Complete	131103	131103
Stud, 3/8" x 8-3/4" (4)	*	*
Motor Lead Wire	126605	126605
Control Valve, Complete	C981G	C981G
1/4" Tube x 10-1/2"	*	*
90° Connector, 1/4" x 1/4"	*	*
Drain Plug, 1/4" NPT	*	*
Set Screw, socket head, cone point, 3/8" x 1/2" (2)	*	*
Set screw, socket head, cup point, 3/8" x 5/16" (2)	*	*
Hex Head Cap Screw, 3/8" x 3/4" (4)	*	*
Hex Nut, 3/8" x 5/8" x 5/16" (4)	*	*
Motor 1 Phase (Flatted Shaft)	92F115A	92F120A
†Motor 3 Phase (Flatted Shaft)	92F315A	92F320A

†Requires 126943 Impeller Nut for 3 phase Motor.
*Standard Hardware Item